



Broadband Adapter

Instruction Manual

Thank you very much for purchasing the Broadband Adapter. Before using the Broadband Adapter, please read the Instruction Manual as well as the Instruction Manual and Important Safety Instructions provided with the Dreamcast. After reading this manual, be sure to keep it handy for future reference.



100BASE-T and 100BASE-TX compatible



Failure to comply with these cautions may result in personal injury or property damage from electric shock or other accidents.

- Never attempt to disassemble or modify the Broadband Adapter.
- Do not leave the Broadband Adapter lying on the floor where someone could trip over it and damage the Broadband Adapter or trip over it and injure themselves.
- Never allow anyone, especially small children, to play with the Ethernet cable that connects to the Broadband Adapter. Also never allow the Ethernet cable to become wrapped around someone's neck as it could result in asphyxiation. The Ethernet cable should only be handled by a responsible adult.

Usage Precautions

Follow the precautions shown below when using the Broadband Adapter. Failure to follow these precautions could damage the Broadband Adapter or cause it to malfunction.

[Usage Environment]

- Do not use or place the Broadband Adapter in an area that is very hot, or cold, windy, dusty, humid or in an area where water or moisture such as rain is used or falls.
- If you leave the Broadband Adapter side a heated room from outdoors on a cold day, the ambient temperature change may cause condensation to form inside the Broadband Adapter. In these circumstances, the Broadband Adapter should be left to dry indoors for one hour before using it.
- The Broadband Adapter should be used in the following environmental conditions:
Temperature: 41°F to 95°F Humidity: 55% to 85% RH (with no condensation)

[Handling the Broadband Adapter]

- The Broadband Adapter contains precious electronic components. Do not drop or strike the Broadband Adapter.
- Never attempt to disassemble or modify the Broadband Adapter.
- Hold the Broadband Adapter by the front edge. Do not touch any of the side. Never use chemicals, solvents, stains, etc.
- When connecting the Broadband Adapter, do not apply excessive force to it. Doing so could damage the Broadband Adapter.
- Keep the connection free of dust and other foreign objects. Doing so for the connectors could result in incorrect operation due to a poor connection.

[Miscellaneous]

- After opening the connection pack that the Broadband Adapter is packaged in, dispose of the pack.

[FCC Warning]

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, (2) this device must accept any interference that may be received, including interference that may cause undesired operation.

Please carefully review the instructions and diagrams before before attempting to install the Broadband Adapter. If at some point in time you wish to play a network game or application that only supports the use of the modem, just reverse the procedure described below to reinstall it.

1 Remove the modem



First, it is necessary to remove the modem that is installed in the Dreamcast. Begin by turning off the power, disconnecting the power cable and phone cable (if connected), then turn the Dreamcast on its side as shown in the diagrams above so that the modem can be kept. While holding the Dreamcast securely with one hand, press up on the modem latch with your other hand and then press up with your fingers on the ridge of the modem.

Usage Precautions

- Always be certain to turn off the Dreamcast and disconnect the power cable and phone cable (if connected) before removing the modem and installing the Broadband Adapter.
- If you leave a slot in the Dreamcast while removing the modem, you could damage the disc. Check to ensure that there is no disc in the Dreamcast before removing the modem.
- You could damage the modem if you attempt to remove it with only one hand. Always use two hands when removing the modem.
- Although the modem is attached somewhat loosely to the Dreamcast, never use it as a screwdriver or other implement to forcibly pry the modem off.
- After removing the modem, store it in a safe place for future use.
- The modem should only be removed by an adult.



2 Install the Broadband Adapter

Once the modem has been removed, refer to the diagram and insert the Broadband Adapter. Press firmly on the Broadband Adapter until it snaps into place and its edges are flush with the Dreamcast.



3 Plug in the Ethernet cable

- After the Broadband Adapter is installed, an Ethernet cable (type not included) must be connected. Refer to about the Ethernet Cable for details about the type of cable to use.
- Connect the connection of the connector (shown next) and then insert the Ethernet cable connector into Broadband Adapter and to the net-place.



4 Installation complete

Installation of the Broadband Adapter is complete. Continue a Dreamcast controller, and other peripheral devices as desired, and the power cable. To use the Broadband Adapter, place a Broadband Adapter supporting game or application into the Dreamcast and turn the power on. Please refer to the game or application manual for specific details about network connection and operation.



About the Broadband Adapter

Although the Broadband Adapter and the modem are identical in shape when viewed from the side, the cable connectors are different. In addition, the cable connector on the modem is labeled "LAN", while the cable connector on the Broadband Adapter is labeled "LAN".



 
 
Broadband Adapter



Modem

About the Ethernet Cable

The Ethernet cable that should be used for connection with the Broadband Adapter will be very similar in appearance to the phone cable that is provided with the Dreamcast. Be very careful not to connect the wrong cable.



Pay attention to the following points when connecting the Ethernet cable.

- Use the Ethernet cable specified by your service provider. If your service provider does not specify a particular cable type, Sega recommends that a category 5 UTP (Unshielded Twisted Pair) or STP (Shielded Twisted Pair), 3 pair (4 pairs) cable be used.
- Ensure that the Ethernet cable is connected to the Ethernet equipment as specified by your service provider.

Detailed View of the Cable Connectors



Ethernet cable



Phone cable

Using an Ethernet cable other than that specified by your service provider, as indicated above, or connecting the cable to something other than Ethernet equipment, could damage the Dreamcast, the Broadband Adapter, or the equipment the Ethernet cable has been incorrectly connected to, or cause the Dreamcast, Broadband Adapter or incorrectly connected equipment to malfunction.

Troubleshooting

Before contacting Sega for requesting service, please check the following.

- Are you using the phone cable instead of an Ethernet cable?
- Is the Ethernet cable firmly connected to both the Dreamcast and your Ethernet equipment?
- Is the Broadband Adapter correctly and securely connected to the Dreamcast?
- Are you using software that does not support the Broadband Adapter? The Broadband Adapter can only be used with software that supports it or not.
- Is the Ethernet cable the correct configuration for both the Broadband Adapter and the Ethernet equipment you are using? Check with your service provider or the Ethernet equipment manufacturer to ensure that the Ethernet cable configuration is correct. The configurations for the Broadband Adapter connector is noted below.

Broadband Adapter's RJ-45 connector configuration

Pin	Signal
1	Transmit data (TX+)
2	Transmit data (TX-)
3	Receive data (RX+)
4	Not used
5	Not used
6	Receive data (RX-)
7	Not used
8	Not used



LIMITATION OF LIABILITY: THE WARRANTIES SET FORTH IN THIS AGREEMENT REPLACE ALL OTHER WARRANTIES, SUCH AS AMERICA DREAMCAST SOFTWARE'S DISCLAIMER ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND WORKMANSHIP OF IDEAL. SEGA'S RIGHTS WITH RESPECT TO THE DISTRIBUTION, SOFTWARE AND HARDWARE, NO SEGA OF AMERICA DREAMCAST DEALER, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION OR ADDITION TO THIS WARRANTY. IN NO EVENT WILL SEGA OF AMERICA DREAMCAST OR ITS SUPPLIERS BE LIABLE FOR ANY LOSSES OR RECOVERIES OF DERIVATIVE PRODUCTS OR SERVICES, SUCH PROFITS, LOSS OF INFORMATION OR DATA, OR ANY OTHER SPECIAL, INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES, ARISING IN ANY WAY OUT OF THE SALE OF, USE OF OR INABILITY TO USE ANY SEGA OF AMERICA DREAMCAST PRODUCT OR SERVICE, EVEN IF SEGA OF AMERICA DREAMCAST HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO CASE SHALL SEGA OF AMERICA DREAMCAST'S LIABILITY EXCEED THE ACTUAL MONEY PAID FOR THE PRODUCTS AT ISSUE. Because some jurisdictions do not allow the limitation of implied warranty or liability for incidental, consequential, special or indirect damages, the above limitations may not always apply. The above limitations will not apply in cases of personal injury where used to the extent that applicable law requires such liability.

Sega of America Dreamcast, Inc.

P.O. Box 7600 San Francisco, CA 94106-0600
1-800-254-8824 & www.sega.com

- Please note that specifications and product names may change without notice.
- Discontinued reproduction of the contents of this document is prohibited.
- SEGA, Dreamcast and the Dreamcast logo are either registered trademarks or trademarks of Sega Corporation.
- SEGA is a registered in the U.S. Patent and Trademark Office.

Export, use for profit, rental or leasing of this product is prohibited. Further, Sega offers no warranty service or support outside of the US and Canada.